FINAL FORMS II





UNIQUE TRIMS AND SHAPES IN PREFINISHED ALUMINUM

BUY ONLINE >




Trims are available in clear satin anodized or painted finishes.

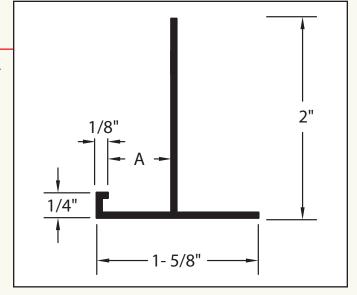

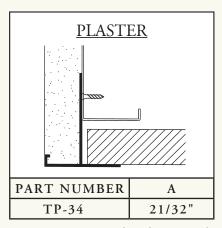


EDGE TRIM utilized as outside corner of fascia and soffit when used with plaster...bottom edge functions as a screed.

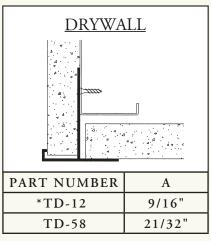

EDGE TRIM used to transition drywall vertical (fascia) to drywall horizontal (soffit).

*Appearance may be slightly different than the drawing above.

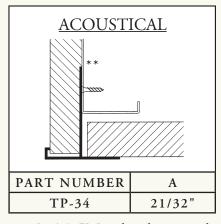

EDGE TRIM utilized as outside trim corner of fascia and soffit.



^{**}Field routing of tile may be required.